



Clothesline Pole Assembly Instructions

1. Kit Contents

- Qty (2) 8' Upright Tubes
- Qty (2) 5' Cross Tubes
- Qty (8) 1/4" x 2" Eye Bolts
- Qty (2) 1/4" x 2-1/2" Eye Bolts
- Qty (2) Upright End Caps
- Qty (4) Cross Tube End Caps
- Qty (12) 1/4-20 Nuts
- Qty (1) Assembly Instructions

2. Assembly


- Align the bolt holes in the Upright and Cross Tubes and insert one of the 1/4" x 2-1/2" eye bolts. Invert the assembly and install as shown below:



- Be certain and align the eye bolts properly before tightening

2. Assembly (cont'd)

- Install the remaining $\frac{1}{4}$ " x 2" eye bolts as shown below:

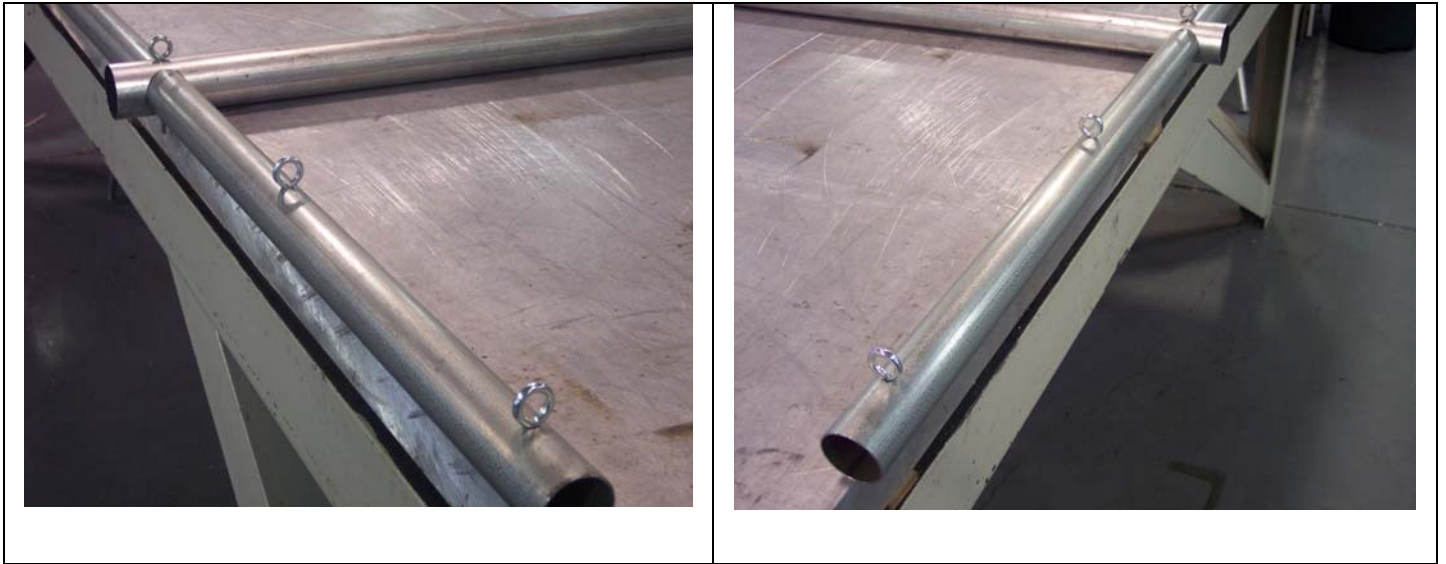

- Install the anti-spin bolt in the lower end of the upright tube:



3. Installation

- The recommended hole depth should be 36" to 40".
- Install the poles 24" to 32" deep in to the concrete.
- The recommended spacing between poles is 15 ft. max.
- Unless additional support is provided such as back wire support. Or
- Filling the tubes (uprights) with concrete for additional support.
- We recommend filling the (upright) poles with concrete once the poles are in place.

